


# How to use a punch card: step-by-step


- 1
- 

## HOW TO SET THE PUNCH CARD



1) INSERT THE PUNCH CARD HOLDER PIN IN THE HOLE BEHIND THE PUNCHCARD SLOT

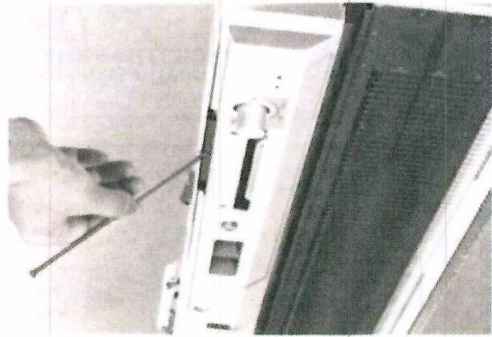



2) INSERT THE PUNCH CARD STRAIGHT INTO THE SLOT WITH THE NUMBER FACING YOU. MAKE SURE THE START LINE IS PARALLEL TO THE PANEL EDGE

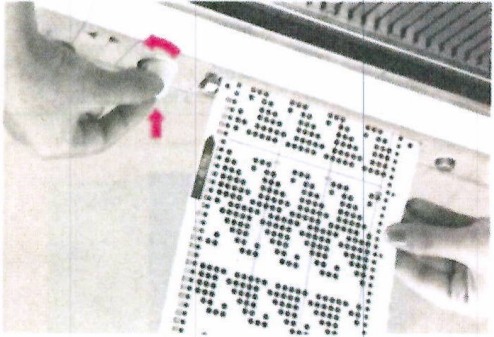

3) TURN THE FEEDING KNOB - PRESSING DOWN THE BUTTON - TO FEED THE PUNCHCARD

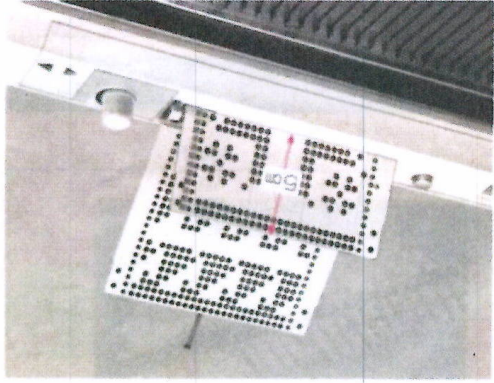
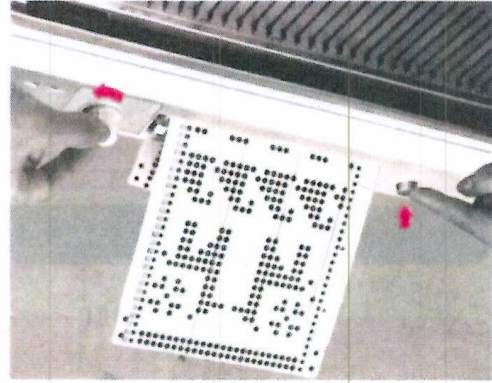


4) USING THE PLASTIC SNAPS, JOIN THE CARD (FRONT OVER BACK) TO ALLOW IT TO ROTATE

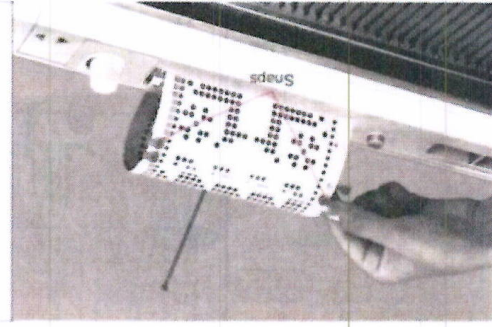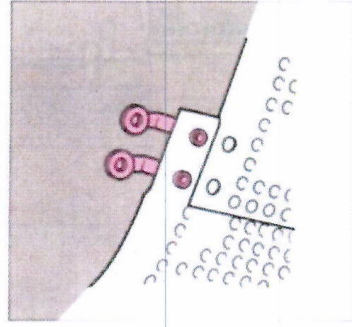



re:

- Then, set up the machine:

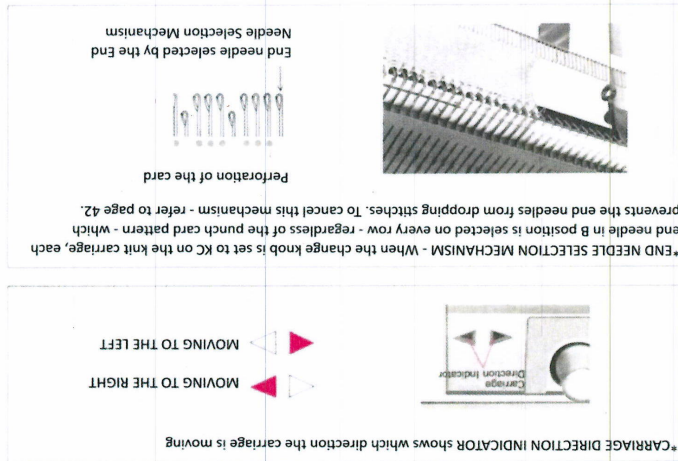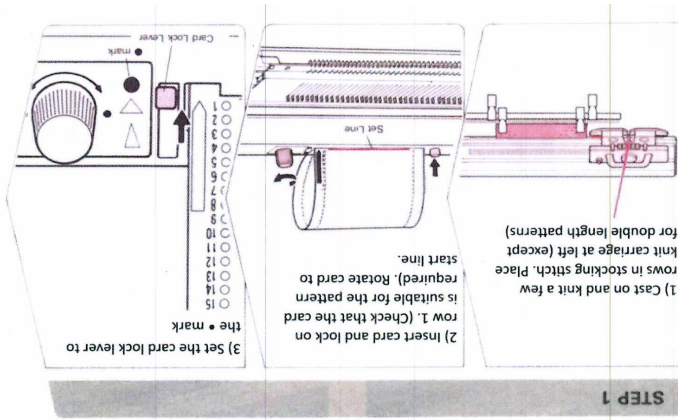

The first steps to all patterning are the same - so study these steps carefully.

**BASIC STEPS TO PATTERN KNITTING**

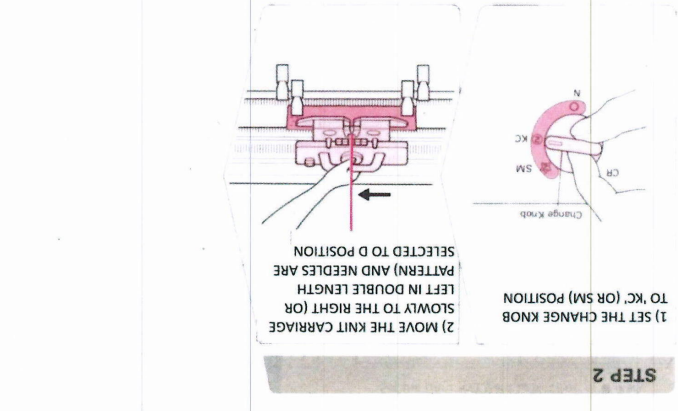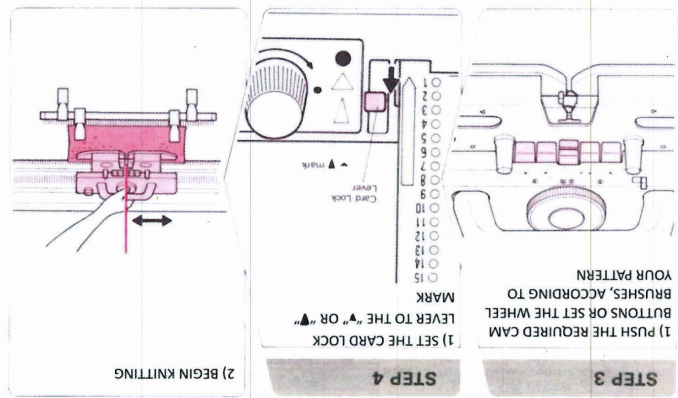

Revision #4

Created 2026-01-15 11:24:26 UTC by Nicky

Updated 2026-01-15 12:19:06 UTC by Nicky